



LOADING PAPER

Turn on the power by pressing "I" on the power switch.

1. In case that trim dusts are stacked in the dust box, make sure to throw them away.

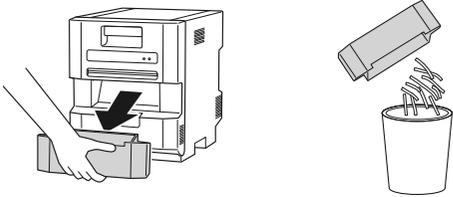


2. Pull the lever to open the front cover.

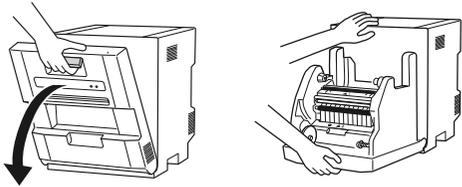

CAUTION: Do not release the hand's hold from the printing unit until it is opened fully. If the hand's hold is released while the printing unit is opened, there is a possibility that the printer falls down.


ATTENTION: Do not open the front cover quickly or with unnecessary force. Do not press the front cover or place a heavy object other than paper after opening the front cover.

3. Install the paper flanges in the paper roll while holding down the knob on the paper flanges.

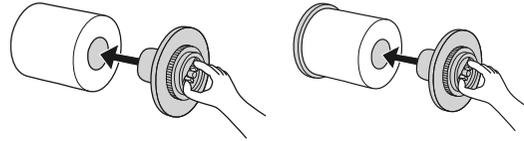


CAUTION: The paper is not set correctly if there is a gap of about 10mm between the paper flanges

4. Set the paper roll in the printer. After setting the paper, remove the seal from the paper.

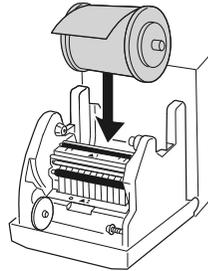


5. Insert the edge of paper under the guide roller by rotating the paper flanges. Insert the paper until the PAPERSET LED is illuminated in blue.

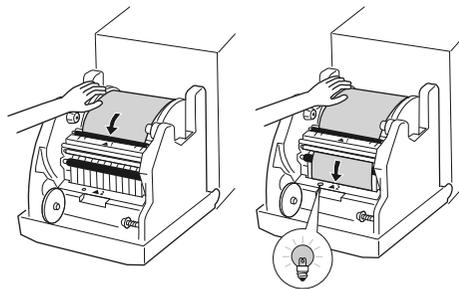


CAUTION: The paper is not set correctly if the PAPERSET LED is blinking in red. Please pull out the paper until the PAPERSET LED turn off.

SETTING INK RIBBON

1. Set the ink ribbon to the printing unit as shown

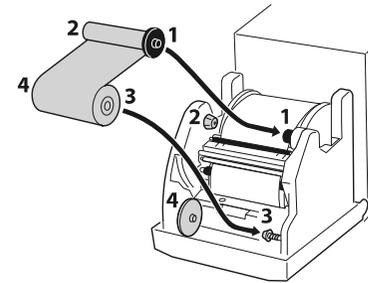

2. Take the slack the ink ribbon by turning the ink ribbon supply core.

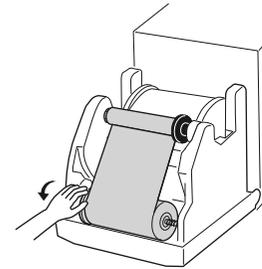



3. Close the printing unit. When close the printing unit, press on the center of the front cover.

In case that both the paper and the ink ribbon are loaded into the printer and the front cover is closed, initialization starts and several sheets of paper are ejected automatically.




CAUTION: Close the printing unit carefully so as not to catch your fingers. Do not close the printing unit quickly.

4. Insert the claw of the dust box first and insert the projected section of the printer in the hole at the bottom of the dust box.

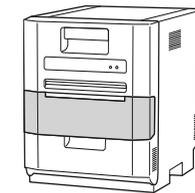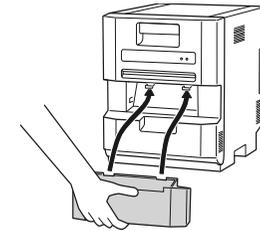

OK

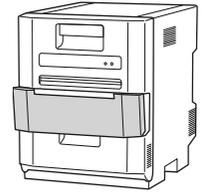

X



CAUTION: The dust box is not set correctly if there is a gap between the front cover and the dust box.

TRANSPORTING THE PRINTER

The following cautions are necessary in transportation of the printer. Since an incorrect transportation method causes a printer fault, follow the correct method.

1. Remove the ink ribbon and paper from the printer before transporting the printer. If the ink ribbon or paper cannot be removed due to a fault, consult with the distributor.
2. Use a genuine box. If the box used at the purchase cannot be used, consult with your distributor and purchase a new box.



WARNING: This equipment is not suitable for use in locations where children are likely to be present.

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

製品には、同梱された電源コードセットを使用すること。また、同梱された電源コードセットは、他の製品に使用しないこと。

For the Customers in the U.S.A.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

For the Customers in Canada

This device complies with Industry Canada's applicable licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For the Customers in Europe



This product shall not be used in the residential area.
This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Hereby, SINFONIA TECHNOLOGY CO., LTD. declares that the radio equipment type CHC-S2245-5(RFID 13.56MHz) is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
<http://www.sinfo-t.jp/eng/printers/red>

Le soussigné, SINFONIA TECHNOLOGY CO., LTD., déclare que l'équipement radioélectrique du type CHC-S2245-5(RFID 13.56MHz) est conforme à la directive 2014/53/UE.
Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
<http://www.sinfo-t.jp/eng/printers/red>

Hiermit erklärt SINFONIA TECHNOLOGY CO., LTD., dass der Funkanlagentyp CHC-S2245-5(RFID 13.56MHz) der Richtlinie 2014/53/EU entspricht.
Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <http://www.sinfo-t.jp/eng/printers/red>

The manufacturer of this product is SINFONIA TECHNOLOGY CO., LTD.
Shiba NBF Tower, 1-30, Shiba-daimon 1-chome, Minato-ku, Tokyo, 105-8564, Japan

If you want to dispose this product, do not mix with general household waste. There is a separate collection system for used electronics products in accordance with legislation under the WEEE Directive (Directive 2002/96/EC) and is effective only within European Union.
For details, consult your dealer.



For more details, please access the following site and download the "User's Guide".
<http://www.sinfo-t.jp/eng/printer/manual/>